

Scales (Analog) Preventative Maintenance

Preventative Maintenance

- Clean plate of debris after each use. Use a brush, if possible, to avoid placing plate under excess pressure
- Check the space between the plate and the base for dirt and debris. If debris is preventing the plate from displacing, use a small, thin object such as an unfolded paperclip or a pin to clear it
- Check scale regularly for levelness
- Check scale calibration regularly